
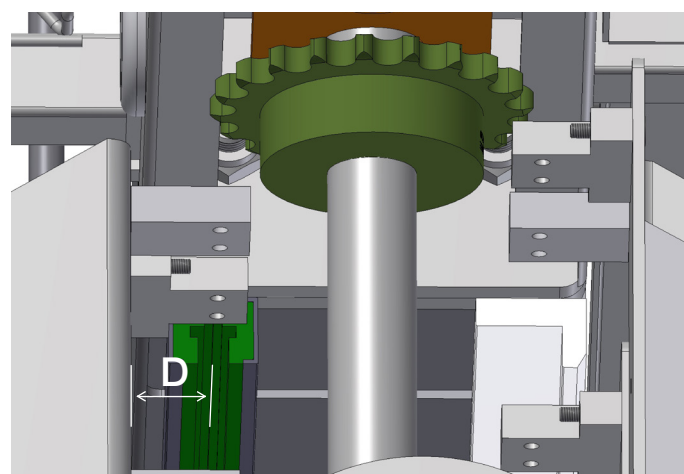


## SERVICE SOLUTIONS // HOW TO

# HOW TO TENSION THE CHAIN ON YOUR TAEI

1. Place a socket wrench on chain adjuster nut - placed at the bottom of the machine beneath the lower chain wheel - position A
2. Place another socket wrench on top nut and turn left to tension the chain - position B
3. Repeat on all 4 threaded rods, both left and right side
4. IMPORTANT - Control that the right and left side of the machine has the same distance after tensioning - position C
5. Control that the distance between the shown edge and the center of the chain is 40-42 mm - position D

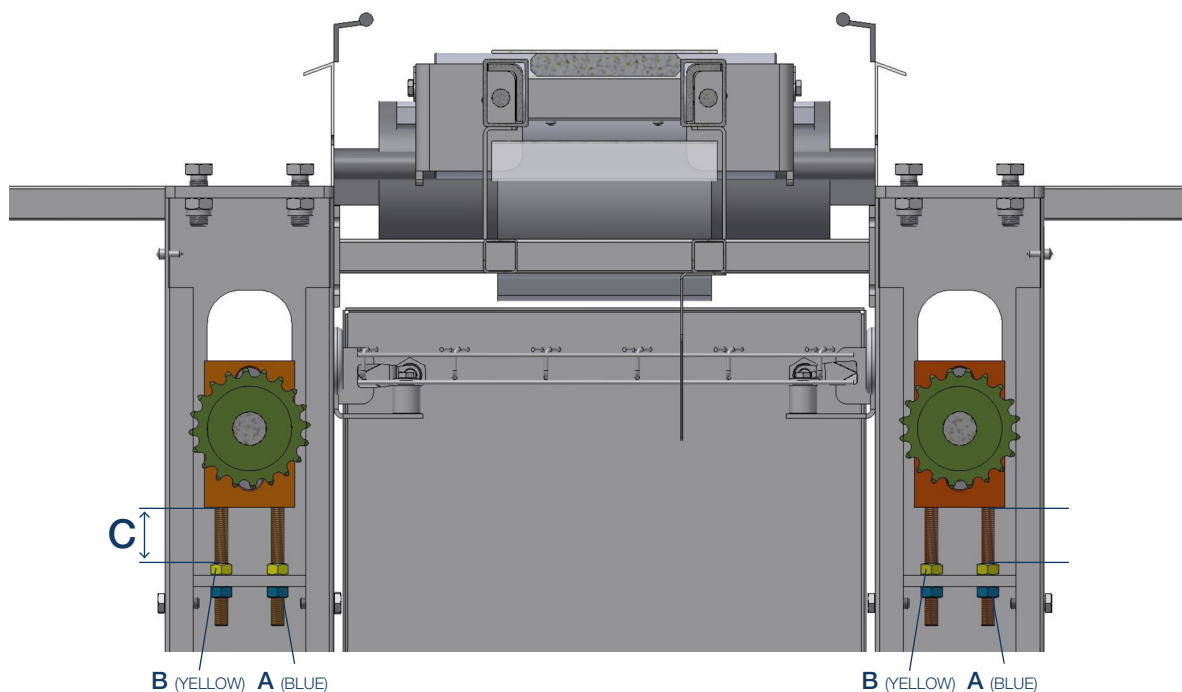

## CONTACT

Central/Eastern Europe  
+49 252 185 070  
service.de@frontmatec.com

Northern Europe, Kolding  
+45 36 999 099  
service.kol.dk@frontmatec.com

Northern Europe, Tandslet  
+45 74 407 644  
service.tan.dk@frontmatec.com

Southern Europe  
+34 932 643 800  
service.es@frontmatec.com

Western Europe  
+31 886 294 000  
service.nl@frontmatec.com