

## SERVICE SOLUTIONS // HOW TO

# HOW TO ADJUST SENSOR SETTINGS ON YOUR AGOL

### Adjust factory settings:



1. Keep Q pressed and power ON > 10 seconds until both yellow LEDs flash 3 X at the same time. - position A

### Near distance adjustment:

1. Place, ex. a box on the conveyor belt, align the box with the edge of the conveyor belt for near distance measurement. - position B
2. Press Q > 3 seconds until green and yellow LED flash at the same time. - position A
3. Proceed to far distance adjustment.

### Far distance adjustment:

1. Place, ex. a box on the opposite side of conveyor and align the back of the box with the conveyor for far distance measurement. - position C
2. Press Q > 1 seconds until green and yellow LED flash at the same time. - position A
3. Near and far distance adjustment are finished.

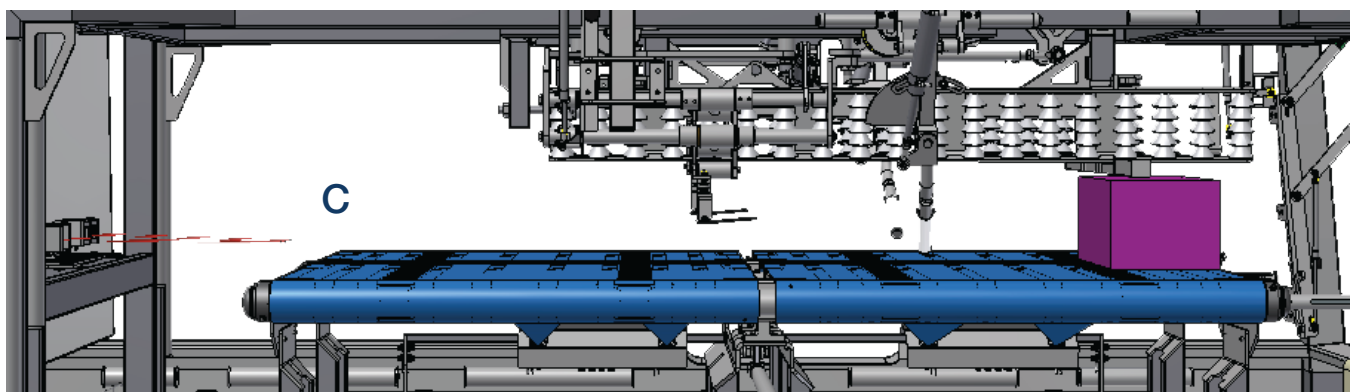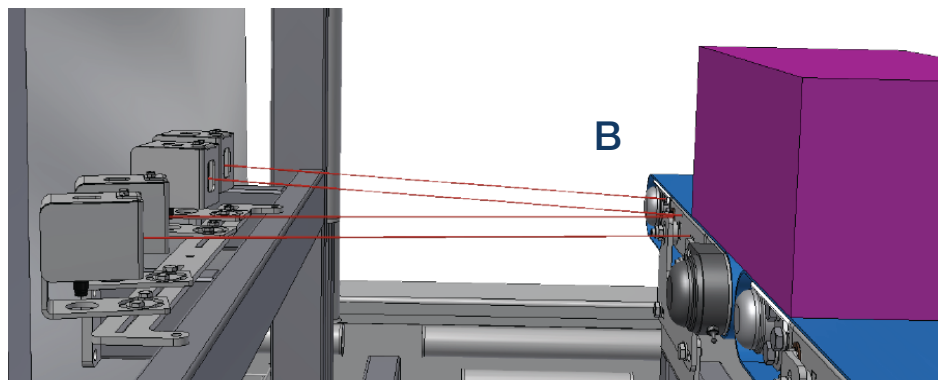

## CONTACT

Central/Eastern Europe  
+49 252 185 070  
service.de@frontmatec.com

Northern Europe, Kolding  
+45 36 999 099  
service.kol.dk@frontmatec.com

Northern Europe, Tandslet  
+45 74 407 644  
service.tan.dk@frontmatec.com

Southern Europe  
+34 932 643 800  
service.es@frontmatec.com

Western Europe  
+31 886 294 000  
service.nl@frontmatec.com