

SERVICE SOLUTIONS // HOW TO

HOW TO ENSURE A PRECISE CUT OF THE BREASTBONE AND BELLY ON YOUR **AUTOLINE CARCASS OPENER APO7 / OMEGA**


Following procedure must be performed weekly.


In-and-Out measurement of breastbow guides

- 1. Place your angle on the fixpoint of the knife **position A**
- 2. Lean the angle along the knife and on the fixpoint on the knife holder, ensuring a fixed position of the angle position B
- 3. Pull the breastbow guides back to fit the angle and then move the angle to the other side, making sure NOT to move the breastbow
- 4. Ensure that the distance between the angle and the breastbows are the same on both sides position C
- 5. If the distance is not the same, give us a call, and we will guide you

Sideway measurement of the breastbows guides

- 1. Set your Autoline APO7 / OMEGA on Auto stop
- 2. Activate the wash position
- 3. Use a measuring tape and measure from the side of the breastbow to the center of the knife position D
- 4. The measurement from the side of the breastbow to the center of the knife has to be the same on both sides to ensure a precise cut

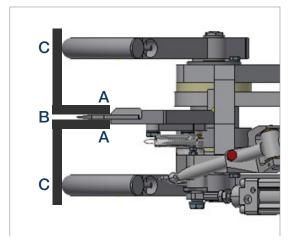

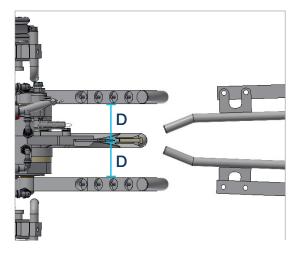

CONTACT

Central/Eastern Europe +49 252 185 070 service.de@frontmatec.com Northern Europe, Kolding +45 36 999 099 service.kol.dk@frontmatec.com Northern Europe, Tandslet +45 74 407 644 service.tan.dk@frontmatec.com Southern Europe +34 932 643 800 service.es@frontmatec.com Western Europe +31 886 294 000 service.nl@frontmatec.com